



www.HylineOffroad.com

1507C West Park Avenue • Perkasie, PA 18944
Tel: 215/257-4323 • Fax: 215/257-4384 • 800-HYLINE 1 (800/495-4831)

Proudly Made In USA

Installation Instructions:

JK Standard Air Dam
Part Number: **JK-10SAD**

Vehicle Fitment:


Fits Hyline Offroad Standard
Front Bumper (P/n JK-10SFB)

Parts List

Qty:

- 1 Standard Air Dam**
- 4 3/8-16 x 1" Gr. 5 Bolts**
- 4 Lock Washers**
- 4 Flat Washers**
- 2 3/8" Nuts**

Tools Needed

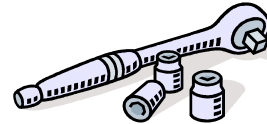

**Ratchet
9/16" Socket
6" Extension**



9/16" Wrench

Congratulations on your purchase of the Hyline Offroad Standard Air Dam. Our products are completely manufactured in our facility located in Perkasie, PA. They are designed and engineered by Offroad enthusiasts just like you to be rock solid at an affordable price. Hyline Offroad would like to thank you for your recent purchase and look forward to serving you in the future.

Hyline Offroad Staff

PLEASE READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION

Air Dam Installation

Step 1 - Before installing your Air Dam make sure there are no wires in your way.

Step 2 - After installing your Hyline Standard Front Bumper you can install your Air Dam Skid Plate. Using the 9/16" socket with 6" extension, place the 3/8-16 bolt with lock washer and flat washer into the socket. While holding the Air Dam in place, thread the 3/8 bolt through the slots and into the weldnut in the bumper. (See Figure 1) You will be installing two 3/8 bolts in the center section of the Air Dam.

Step 3 - Install the other two 3/8 bolts, lock washers, flat washers and nuts into the thru holes on the back side of the Air Dam. You will need the 9/16" wrench and 9/16" socket for this step. (See Figure 2)

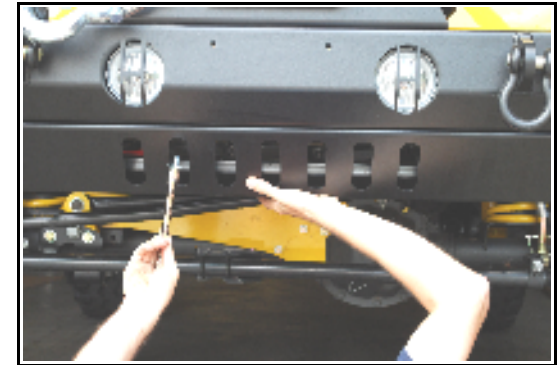


Figure 1



Figure 2

Now you're ready for the ROCKS!!

Send your OFFROAD pictures to pics@HylineOffroad.com . If we choose any one of your pictures to be used on our website, We send you a FREE Hyline Offroad T-Shirt.



Attention

Installation instructions provided must be read and followed exactly when installing product. Failure to do so could potentially result in injury or death of any occupants in the vehicle. **WEAR SEAT BELTS AT ALL TIMES WHEN DRIVING!**

Though our products are rugged, they are primarily designed and built to enhance the appearance of the vehicle and will not protect from death or injury in the event of an accident. Adhere to all vehicle manufacturers specifications